ENGLISH



SANITIZING





Before proceeding, please also carefully consult the warnings in 'Section' 1' of the Polykeg PRO 2.0 user manual and the keg technical sheet available in the 'Download' section of the PolyKeg website.

WHAT NEEDS TO BE SANITIZED

Before starting the filling, sanitize the manual filling kit (tubes, valves, seals, couplers, etc.) or the automatic/semi-automatic filling machine. Before connecting the keg, clean and sanitize all parts likely to come into contact with the product (coupler and external part of the valve). After each filling, clean and sanitize the keg valve. Should it be necessary to temporarily disconnect the keq, clean and sanitize the external part of the valve.

Note: do not use any substance not specified in this manual.

MANUAL FILLING KIT AND VALVE SANITIZATION

Hydroalcoholic solution in demineralized water



SANITIZING



SANITIZING THE POLYKEG MANUAL FILLING KIT

Soak the disassembled components of the manual filling kit in the sanitizing solution listed above. Please follow the dilution rates and time limits indicated above. Rinse thoroughly and dry with sterile air.

SANITIZING OF THE COUPLER AND THE EXTERNAL PART OF THE VALVE

Clean and spray the external surface of the components with the sanitizing solution listed above. Please follow the above dilution rates and time limits.

SANITIZING WITH AUTOMATIC AND SEMI-AUTOMATIC MACHINES



Before starting the filling sanitize the automatic/semi-automatic filler according to the manufacturer's instructions.

Set the filler to sanitize the external surface of the keg valve with hot water or steam according to the above mentioned pressure, temperature and time limits.

This document is property of PolyKeg® S.r.l. - Unauthorized copying and use is strictly forbidden PolyKeg® Srl Via L. Da Vinci, 5/9 24064 Grumello del Monte (BG) – Italy T +39 035 4522245 - info@polykeg.it - www.polykeg.com

