
ENGLISH



DISMANTLING INSTRUCTIONS POLYKEG PRO 2.0



DISMANTLING INSTRUCITONS POLYKEG PRO 2.0 WITH EQUIPMENT

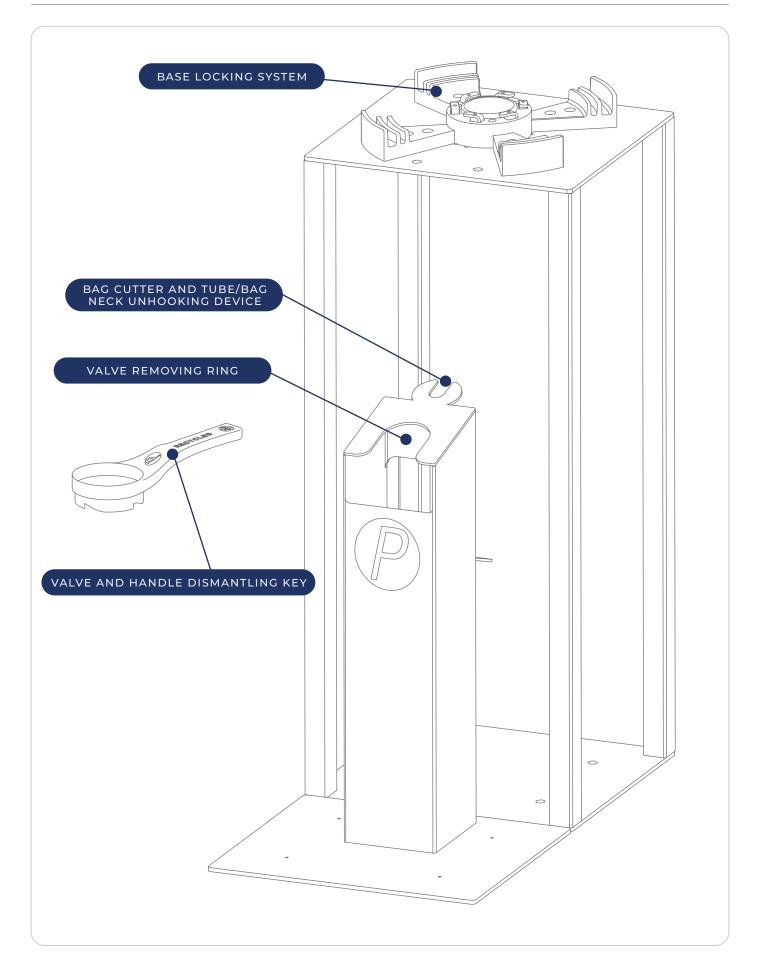

This document is property of PolyKeg® S.r.l. - Unauthorized copying and use is strictly forbidden PolyKeg® Srl Via L. Da Vinci, 5/9 24064 Grumello del Monte (BG) – Italy T +39 035 4522245 - info@polykeg.it - www.polykeg.com


DISMANTLING INSTRUCITONS POLYKEG PRO 2.0 WITH EQUIPMENT



Before proceeding, please also carefully consult the warnings in 'Section 1' of the Polykeg PRO 2.0 user manual and the keg technical sheet available in the 'Download' section of the PolyKeg website.


DISMANTLING PROCEDURE

1. Keg locking

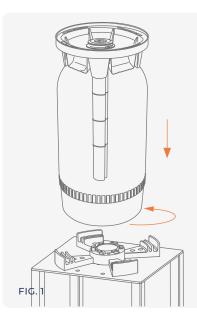


Hook the depressurized keg to the device surface.

2. Valve removal

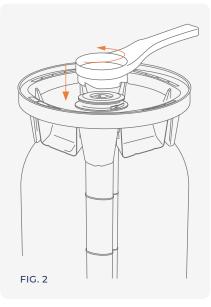


Unscrew the valve using the dedicated dismantling key.

4. Valve from dip tube or from bag kit separation

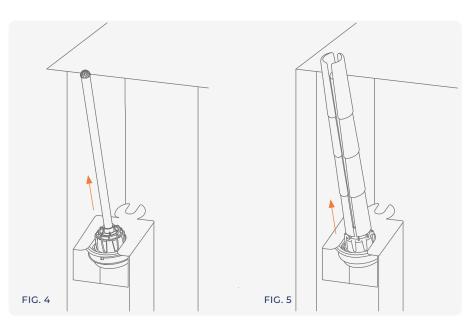


Hook the valve to the ring and then detach it from the dip tube or from the bag kit.

3. Valve extraction with dip tube or bag kit

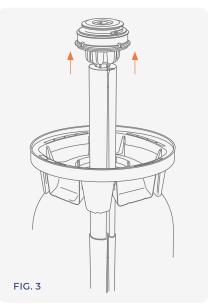

Pull out of the bottle the valve and the dip tube, or the valve and the bag kit.

3. Dip tube from bag separation

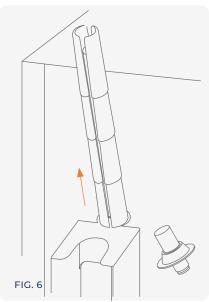

Hook the bag kit to the ring and separate the dip tube and bag from the bag neck.


This document is property of PolyKeg® S.r.l. - Unauthorized copying and use is strictly forbidden PolyKeg® Srl Via L. Da Vinci, 5/9 24064 Grumello del Monte (BG) – Italy T +39 035 4522245 - info@polykeg.it - www.polykeg.com



DISMANTLING INSTRUCITONS POLYKEG PRO 2.0 WITH EQUIPMENT



6. Handle removal

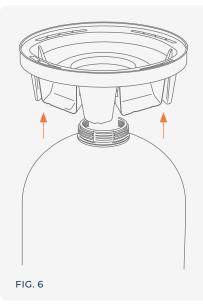

Remove the keg handle.

7. Base removal

FIG. 7

comes out.

Push the bottle until the base

8. Base unlocking



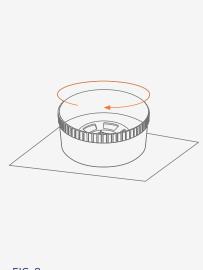


FIG. 8

Unhook the base of the keg from the device surface.

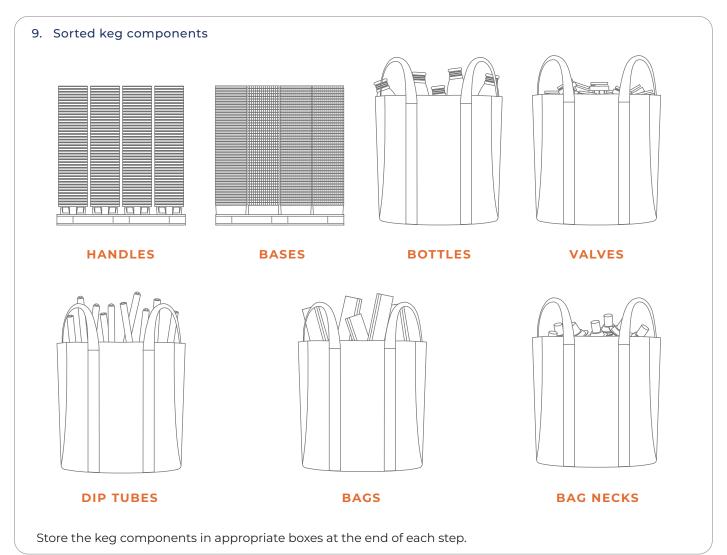

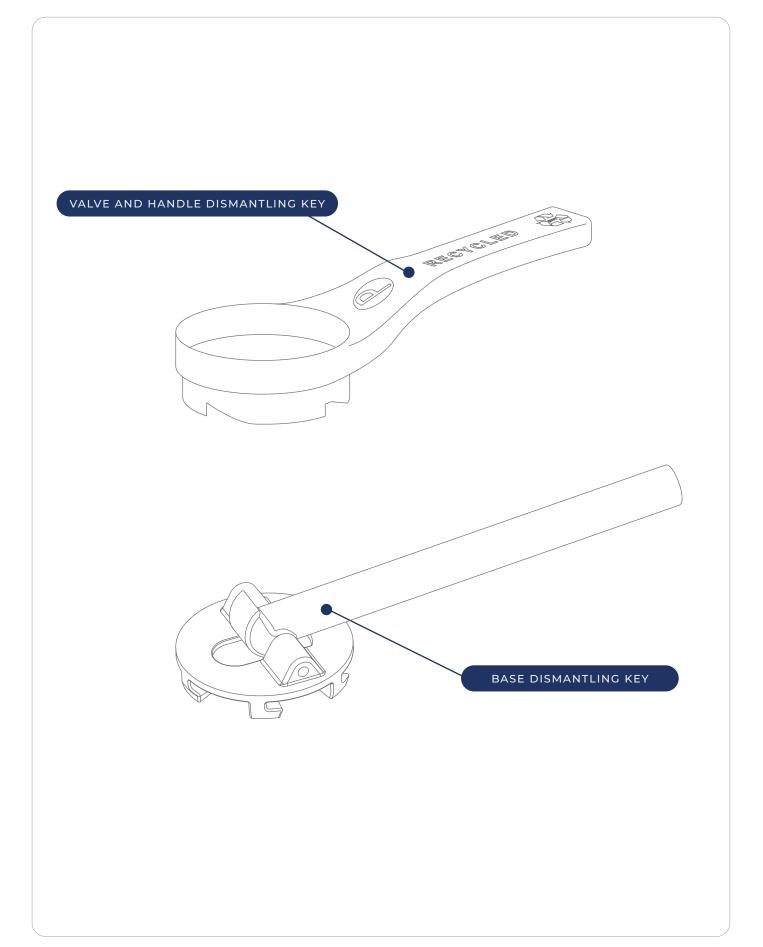


IS08 - Rev. 1 dated 20/03/2024 pag. 4



Before proceeding, please also carefully consult the warnings in 'Section 1' of the Polykeg PRO 2.0 user manual and the keg technical sheet available in the 'Download' section of the PolyKeg website.

DISMANTLING PROCEDURE


1. Valve removal

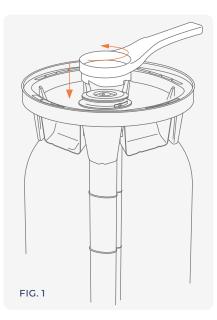

Unscrew the valve using the dedicated dismantling key

4. Base – keg detachment

2. Valve extraction with dip tube or bag kit

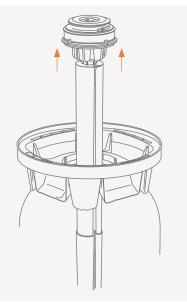


Pull out of the bottle the valve and the dip tube, or the valve and the bag kit.

3. Handle removal


FIG. 3

Remove the keg handle.

5. Valve from dip tube or from bag kit separation

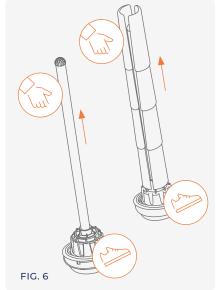

Remove the valve from the tube or bag kit by holding the valve and pulling the tube or bag kit towards you.

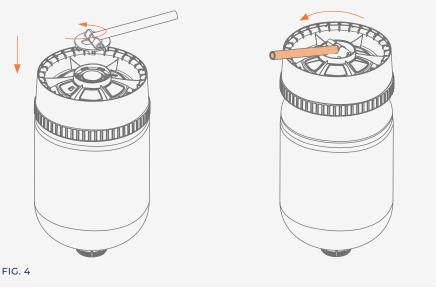


Lock the key on the base of the keg and turn the lever 180° anticlockwise.



I NIS accument IS property of Polykeg® S.r.I. - Unauthorized copying and use is strictly forbidden ISOS Polykeg® Srl Via L. Da Vinci, 5/9 24064 Grumello del Monte (BG) – Italy T +39 035 4522245 - info@polykeg.it - www.polykeg.com



DISMANTLING INSTRUCTIONS POLYKEG PRO 2.0 WITH KEY

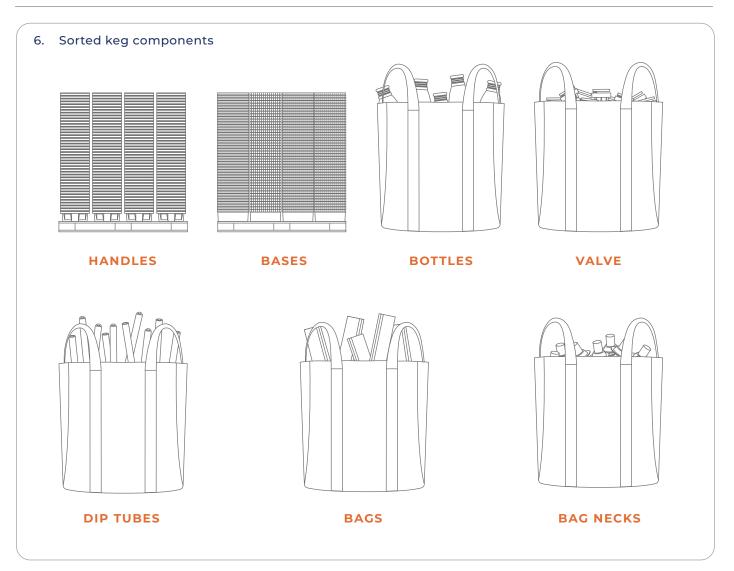

Store the keg components in appropriate boxes at the end of each step.

